

SAVI SERVER PRO

Get started with your SAVI Server Pro quickly and hassle-free with this step-by-step quick guide.

1. Get Connected

- a. Connect SAVI Server Pro to a network that contains a DHCP server
- b. Power on the server. It should boot up automatically when connected to power - if not, press the red button on the front.

Note: SAVI Server Pro ships with DHCP enabled by default.

2. Find Your IP

Determine the SAVI Server's IP address using one of the following methods:

- Router Interface: Log into your network router and find the address assigned to the SAVI Server.
- Network Scan: Connect your laptop to the same network and run a network scan.

*Note: SAVI Server Pro will appear as **SAVI-S-*<serial number>*** on the network, and the serial number is on the back of the device.*

Pro Tip : Assign a DHCP reservation to keep the SAVI Server's IP address consistent. Many devices rely on the SAVI Server Pro's IP address for communication.

3. Set a Static IP Address (Optional)

If a DHCP reservation is not possible, follow these steps to configure a static IP:

- a. Go to **<http://<SAVI Server IP address>/creator>**
- b. Log in with your SAVI Dealer email and password


Need access? Contact sales@savicontrols.com

Note: An internet connection is required for initial authorization. Once you've logged in successfully, your browser will cache the login token.

- c. In Creator, navigate to **Server Configuration > Network**
- d. Select **No** from the **DHCP** dropdown list.

- e. Enter the desired IP address, subnet mask, default gateway, and DNS information, and click **Save Changes**.

Note: SAVI Server Pro will automatically reboot when network settings changes are saved. To reconnect, you'll need to navigate to the server's newly assigned IP address.

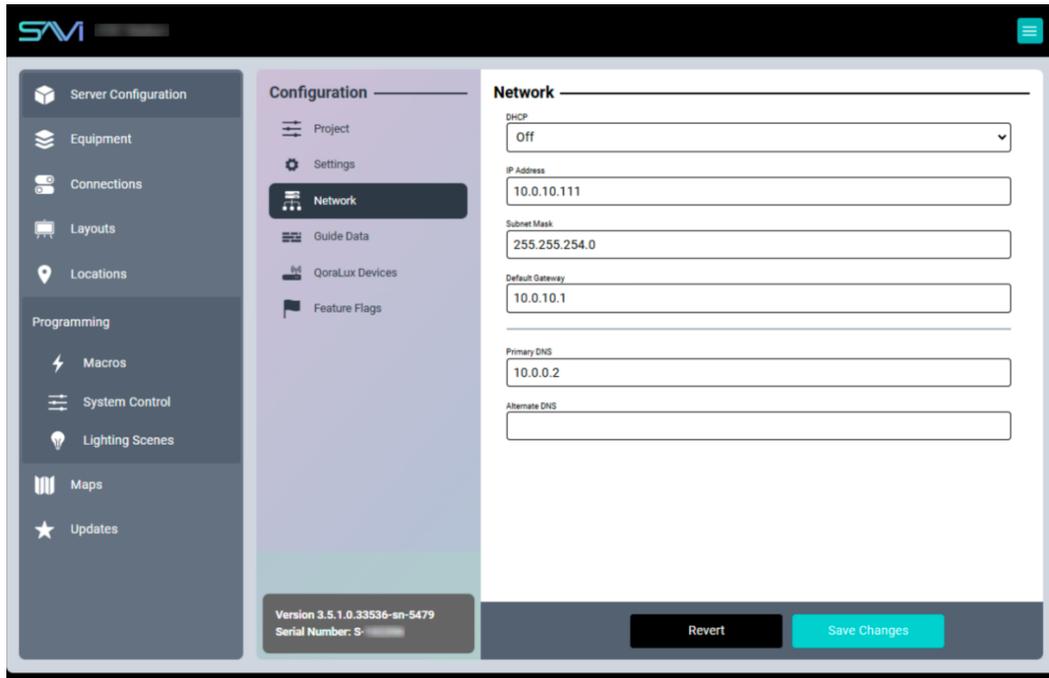

4. Get Licensed

- a. In Creator, navigate to **Server Configuration > Project**
- b. Click **Import from Cloud** to retrieve and activate the SAVI License.

If the server is unable to connect to SAVI's online database, contact SAVI Support at **(214) 785-6510 (Option 2)** to request a "license.lic" file for manual activation.